

- Real time feedback control
- Constantly voltage control
- Control load directly




Specification 規格


| Model | 型號 | AVR-72A | AVR-72A-RS | AVR-48A | AVR-48A-RS | AVR-48L | AVR-48L-RS |
|---------------------|-------|--------------------|------------|-----------------------------------|------------|---------------------|------------|
| Communication | 通訊 | Non | RS-485 | Non | RS-485 | Non | RS-485 |
| Rated current | 額定電流 | 15A max. | | 5A max. | | 10mA | |
| Output method | 輸出方式 | Triac (40A/600VAC) | | | | Photo coupler | |
| Attachment | 附加SCR | | | | | SCR-xxKL (40A max.) | |
| Operating voltage | 工作電壓 | | | 90~265VAC 50/60Hz | | | |
| Control method | 控制方式 | | | Phase control | | | |
| Setting method | 設定方式 | | | Voltage or Percentage selectable | | | |
| Surge duration | 耐突波電流 | | | 410A / 1 cycle of power frequency | | | |
| Min. block voltage | 最低耐壓 | | | 600VAC (repetitive) | | | |
| Leakage current | 洩漏電流 | | | 5 mA max. | | | |
| Dielectric strength | 電介強度 | | | Over 2.5KV | | | |
| Isolation strength | 絕緣強度 | | | Over 100MΩ / 500VDC | | | |
| Operating temp | 使用環境 | | | - 20°C ~ + 80°C : 35 ~ 85%RH | | | |
| Housing material | 外殼材質 | | | Intensive PC+ABS (UL-94V0) | | | |

Outline dimension 外形尺寸

AVR-72A

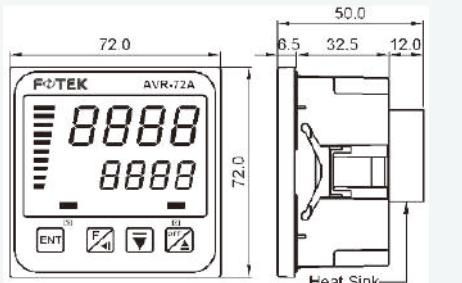


AVR-48A / AVR-48L

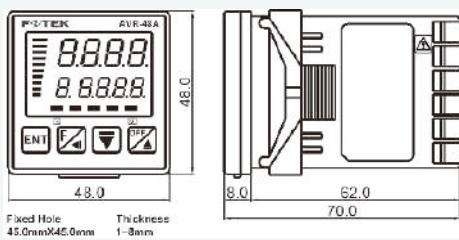


Connection diagram 接線圖

AVR-72A

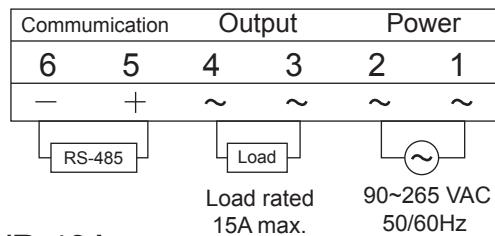


AVR-48A

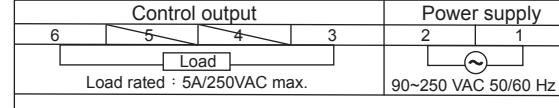

RS-485 Communication



AVR-48L

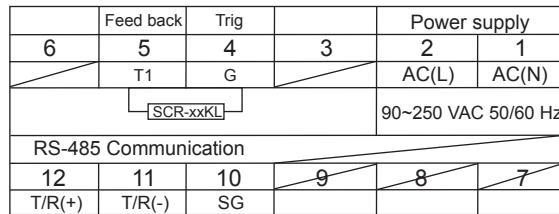

Setting of parameter 參數設定

| Function | Display | Range | Description |
|--|--|--|---|
| <p>Control status 控制狀態 Press [SET] & [F] Key ↓ 3 sec</p> <p>Setting of Lock 鎖住設定 Press [SET] Key ↓</p> <p>Selecting of display 設定選擇 Press [SET] Key ↓</p> <p>Setting of voltage 最高輸出電壓設定 Press [SET] Key Press [SET] Key ↓ 3 sec</p> <p>Setting of span 電壓修正設定 Press [SET] Key</p> | <p>8888 8888</p> <p>Lock 0</p> <p>P_U U</p> <p>SLH 220</p> <p>SPn 1.00</p> | 0 ~ 250 0 ~ 99 0 ~ 1 0 ~ 250 0.00 ~ 9.99 | <p>1> 「10」 : Unlocked</p> <p>1> 「P」 : 0~100% 2> 「U」 : 0~SLH</p> <p>1>SV setting limit 2>Range : 0~250</p> <p>1> Range : 0.01~9.99 2> 「PV」 = 「PV」 * 「SPn」</p> |

Setting of communication 通訊參數設定

| Function | Display | Range | Description |
|--|--|--|--|
| <p>Control status 控制狀態 Press [SET] & ▼ Key ↓ 3 sec</p> <p>Controller NO. 控制器編號設定 Press [SET] Key ↓</p> <p>Communication protocol 通訊協定選擇 Press [SET] Key ↓</p> <p>Communication speed 通訊速率選擇 Press [SET] Key ↓</p> <p>Data configuration 資料結構選擇 Press [SET] Key</p> | <p>8888 8888</p> <p>ID 1</p> <p>r5 0</p> <p>bPS 192</p> <p>b1t 8n1</p> | 0 ~ 250 1 ~ 255 0 ~ 1 96 / 192 / 384 8N1 / 8E1 8O1 / 8N2 7O1 / 7E1 | <p>1> Range : 1~255</p> <p>1> 「rs=0」 : Modbus-RTU 2> 「rs=1」 : Modbus-ASCII</p> <p>1> 「bPS =96」 : 9600 bps 2> 「bPS =192」 : 19200 bps 3> 「bPS =384」 : 38400 bps</p> <p>1> 「b1t =8N1」 : 8 bit non parity 2> 「b1t =8O1」 : 8 bit odd parity 3> 「b1t =8E1」 : 8 bit even parity 4> 「b1t =8N2」 : 8 bit non parity 5> 「b1t =7O1」 : 7 bit odd parity 6> 「b1t =7E1」 : 7 bit even parity</p> |